

WIRING DIAGRAMS
Article Text
1992 Volkswagen Jetta
For Volkswagen Technical Site
Copyright © 1998 Mitchell Repair Information Company, LLC
Tuesday, December 07, 1999 11:31PM

ARTICLE BEGINNING

1992 WIRING DIAGRAMS
Volkswagon

JETTA & JETTA GLI

COMPONENT LOCATION MENU

COMPONENT LOCATIONS TABLE

AA

Component	Figure No. (Location)
A/C CLUTCH RELAY (16V GLI)	6 (D 23)
A/C COMPRESSOR CLUTCH (16V GLI)	6 (D 23)
A/C COMPRESSOR CLUTCH (DIGIFANT AND DIESEL)	6 (D 23)
A/C COMPRESSOR CLUTCH (ECO DIESEL)	3 (E 11)
A/C EVAP TEMPERATURE SWITCH (ECO DIESEL)	6 (D 23)
A/C LOW PRESSURE SWITCH (ECO DIESEL)	3 (E 9)
A/C REFRIG LOW PRESSURE SWITCH (16V GLI)	1 (C 1)
A/C SWITCH	6 (E 21, 22)
A/C TIME DELAY RELAY	1 (B, C 1)
A/T CONSOLE LIGHT	8 (A 29)
ABS BRAKE WARNING SWITCHES	4 (B 15)
ABS SYSTEM	4 (B, E 12, 15)
ABS WARNING LIGHT	4 (C 12)
ALTERNATOR	1 (B 3)
ALTITUDE CORRECTION VALVE (DIESEL)	5 (E 16)
BACK-UP LIGHT SWITCH	8 (B 29)
BATTERY	1 (A 2)
BEAM SELECT SWITCH	6 (A 20, A 22)
BLOWER RESISTOR	6 (E 20, A 22)
CENTRAL LOCKING SWITCH	9 (C 33)
CIGARETTE LIGHTER AND LIGHT	7 (A 24)
CIS-E MOTRONIC CONTROL UNIT (16V GLI)	3 (A, C 11)
COOLANT LOW LEVEL SWITCH	7 (B 25)
COOLANT TEMPERATURE SENDER	7 (A 25)
CRUISE CONTROL SYSTEM	4 (A 12, 15)
DEFOGGER SWITCH	8 (E 29)
DIAGNOSTIC CONNECTOR (16V GLI)	3 (C 11)
DIAGNOSTIC CONNECTOR (DIGIFANT CAIF)	2 (C 7)
DIGIFANT CONTROL UNIT (CALIF)	2 (A, B 7)
DIGIFANT CONTROL UNIT (EXCEPT CALIF)	2 (D 7)
DIRECTIONAL SWITCH	6 (A 21, A 23)
EMERGENCY FLASHER SWITCH	6 (A 20, 22, A 23)
FRESH AIR SWITCH ILLUMINATE LIGHT	6 (D 20)
FUEL CUT-OFF VALVE (DIESEL)	5 (E 16)
FUEL GAUGE SENDER (DIESEL)	5 (E 18)
FUEL INJECTORS (DIGIFANT)	2 (A 5, E 5-6)
FUEL PUMP (GAS)	5 (E 19)
FUEL TANK UNIT (GAS)	5 (E 19)
FUSE #23	6 (D 21)

WIRING DIAGRAMS
Article Text (p. 2)
1992 Volkswagen Jetta
For Volkswagen Technical Site
Copyright © 1998 Mitchell Repair Information Company, LLC
Tuesday, December 07, 1999 11:31PM


FUSE RELAY PANEL	5-8 (C 16-31)
FUSE RELAY PANEL LAYOUT	9 (D, E 33, 35)
GEAR SELECTOR SWITCH	8 (A 28, 29)
GLOVE COMPARTMENT LIGHT	7 (E 26)
GLOW PLUGS (DIESEL)	5 (E 17)
HYDRAULIC PUMP RELAY	4 (E 15)
HYDRAULIC UNIT	4 (E 13, 15)
IDLE STABLE VALVE (16V GLI)	3 (B 8)
IGNITION BOOSTER (16V GLI)	3 (D 11)
IGNITION BOOSTER (DIGIFANT CALIF)	2 (C 4)
IGNITION COIL (DIGIFANT EXCEPT CALIF)	2 (E 4)
IGNITION CONTROL UNIT (DIGIFANT EXCEPT CALIF)	2 (E 7)
IGNITION SWITCH	5 (A 16)
INSTRUMENT CLUSTER	9 (A, E 32, 34)
INTERIOR LIGHT DELAY SWITCH	10 (D, E 36, 37)
LEFT FRONT DOOR SWITCH	10 (E 37, 36)
LIGHT SWITCH	5 (A 18, 19)
LUGGAGE COMPARTMENT LIGHT SWITCH	7 (A 25)
MULTI-FUNCTION SWITCH	7 (A 27)
O2 SENSOR (DIGIFANT)	2 (B 4, C 5)
OIL PRESSURE SWITCHES	7 (A 25)
PARK BRAKE SWITCHES	8 (E 31)
POWER MIRRORS	10 (C, D 36, 38)
POWER SEATS	9 (B, C 35)
POWER WINDOWS	10 (A, C 36, 38)
RADIATOR COOLING SYSTEM (DIESEL)	3 (C, E 8, 11)
RADIATOR COOLING SYSTEM (GAS)	1 (C, E 1, 3)
RADIO (PARTIAL)	10 (A 38)
SEAT BELT SWITCH	8 (E 30)
SHIFT LOCK CONTROL UNIT	8 (A 31, E 30)
STARTER	1 (A 3)
STARTING INTERLOCK RELAY	8 (B 31)
STOP LIGHT SWITCH	8 (D 28)
WARNING MODULE	9 (B, C 33, 34)
WATER SEPERATOR SENDER (DIESEL)	5 (E 19)
WIPER SYSTEM	7 (D, E 24, 27)
AA	

Tuesday, December 07, 1999 11:31PM




Fig. 1: Engine Compartment, Headlights (Grid 1-3)

WIRING DIAGRAMS
Article Text (p. 4)
 1992 Volkswagen Jetta
 For Volkswagen Technical Site
 Copyright © 1998 Mitchell Repair Information Company, LLC
 Tuesday, December 07, 1999 11:31PM

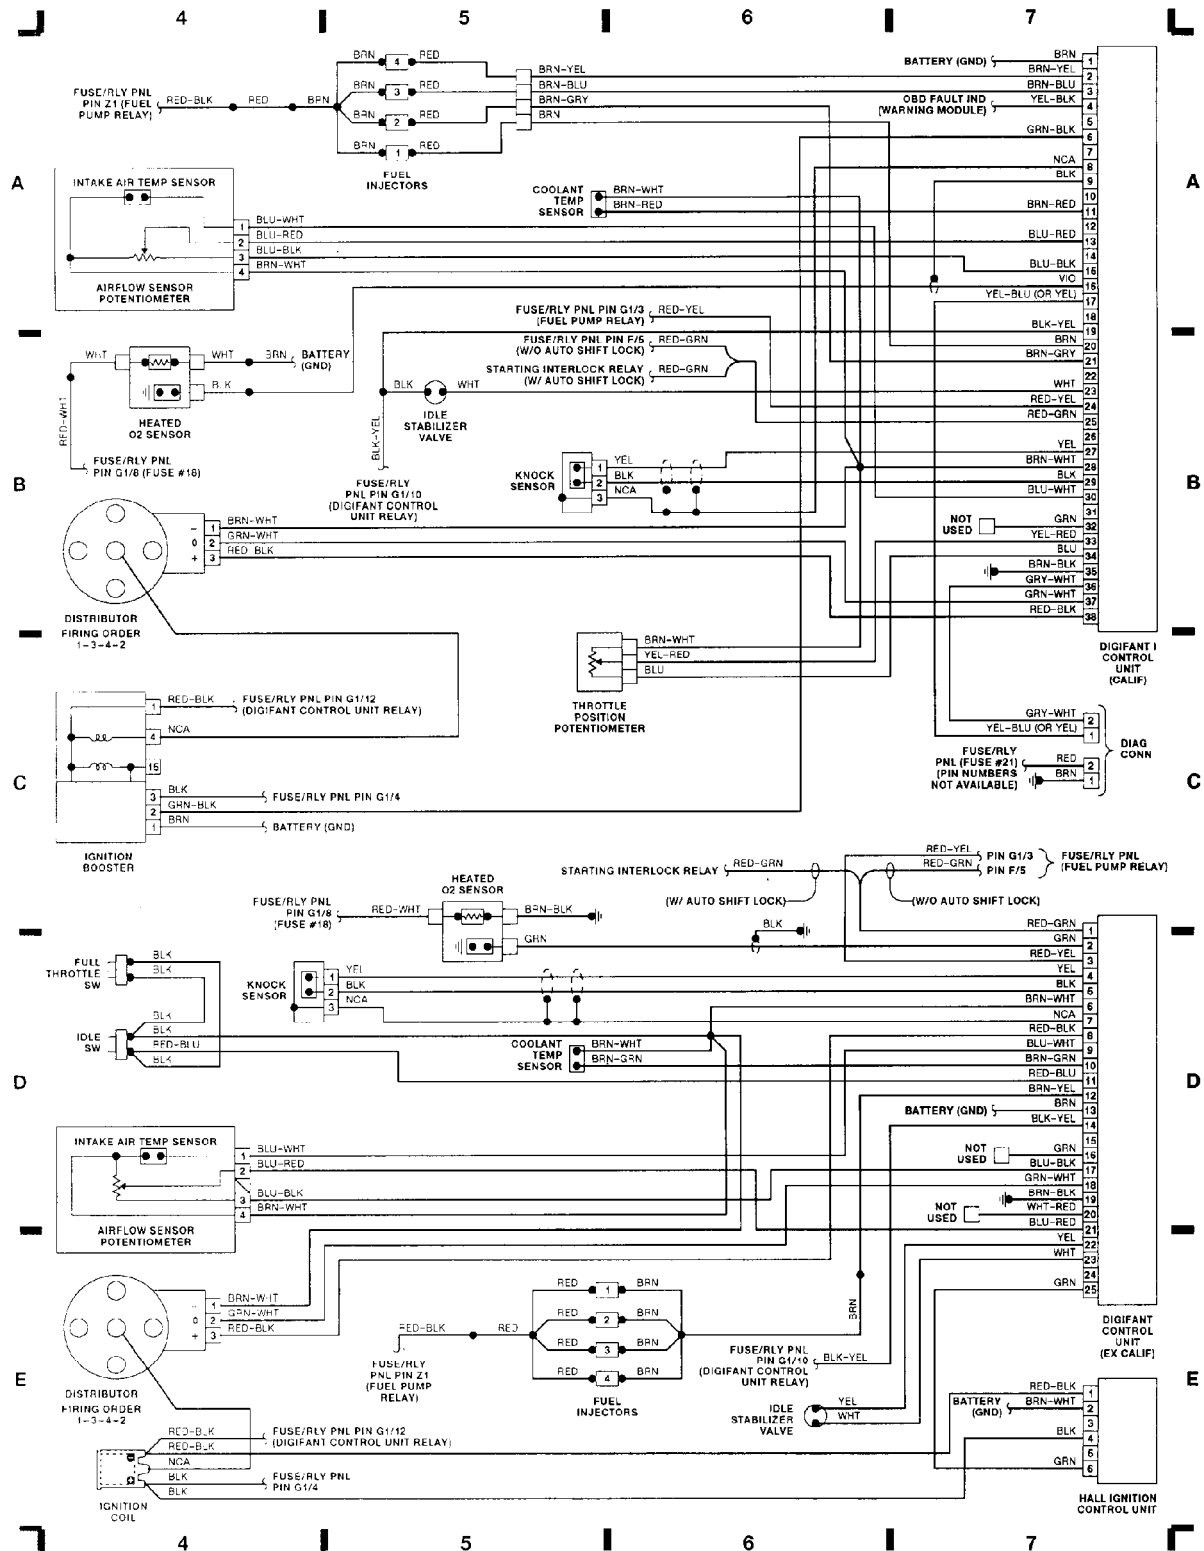


93G03817
 Fig. 2: Digifant Control Unit (Grid 4-7)

WIRING DIAGRAMS
Article Text (p. 5)
 1992 Volkswagen Jetta
 For Volkswagen Technical Site
 Copyright © 1998 Mitchell Repair Information Company, LLC
 Tuesday, December 07, 1999 11:31PM

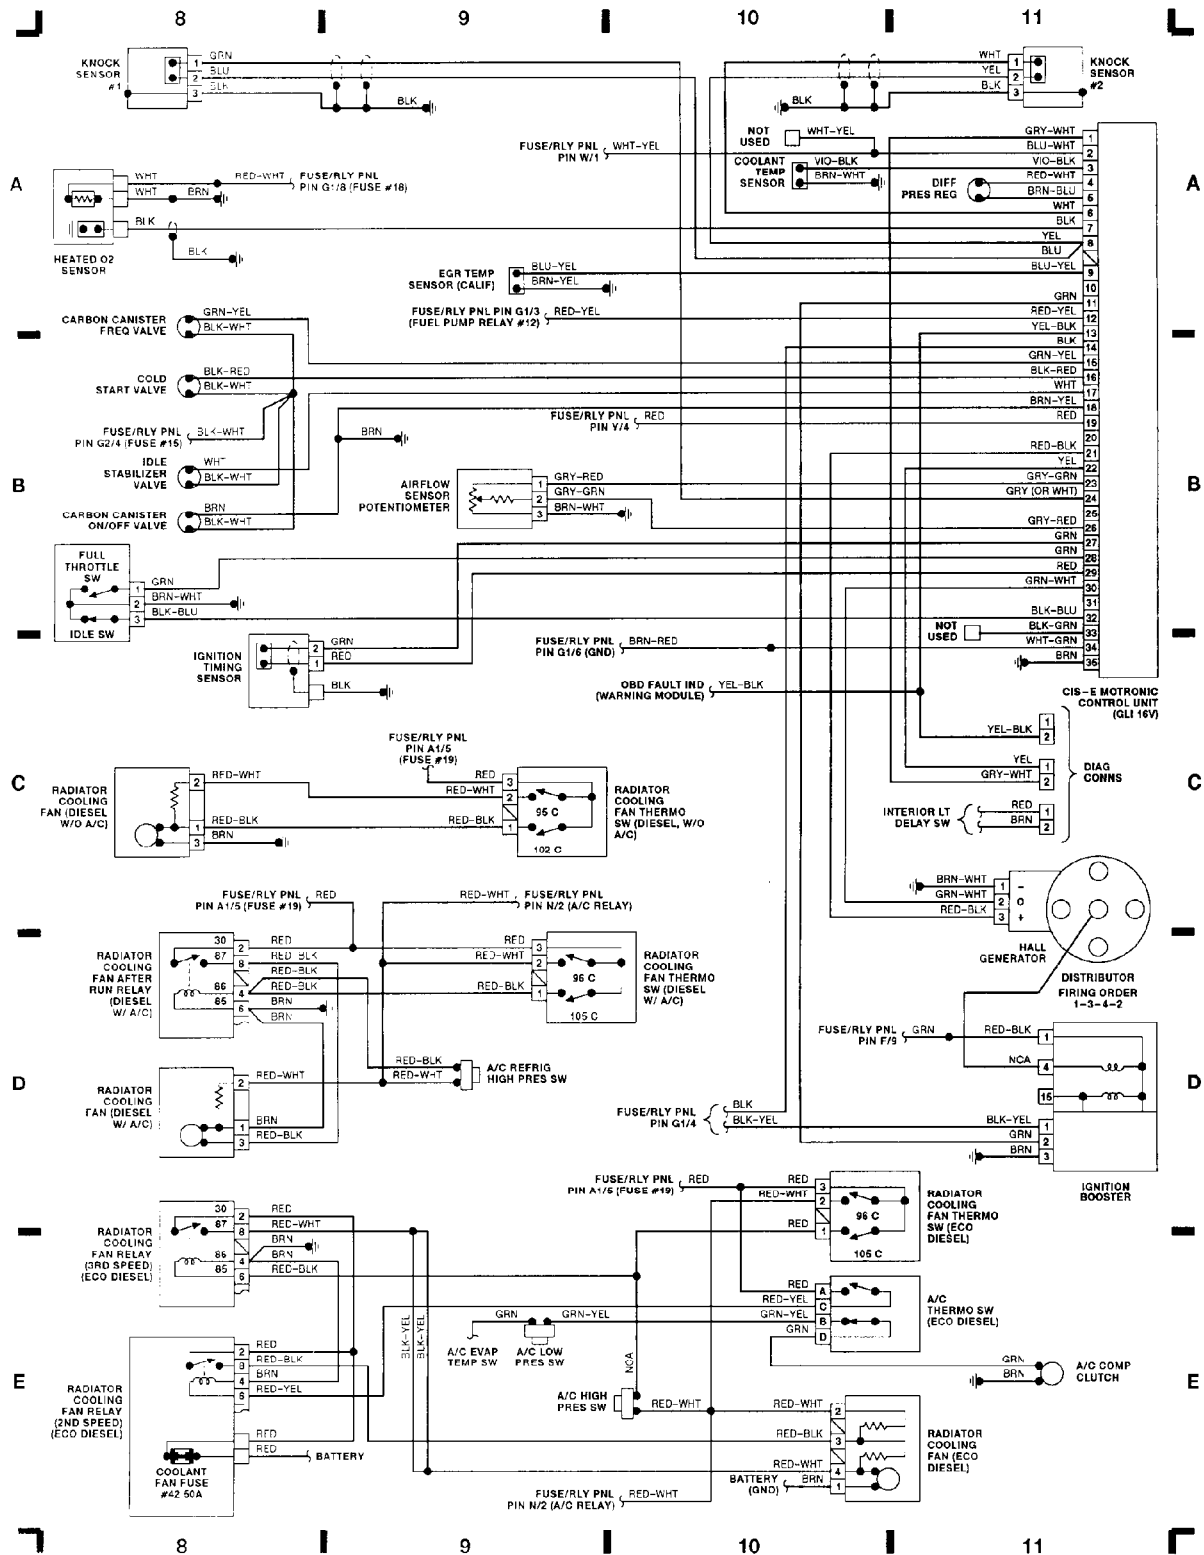

93103818
 Fig. 3: CIS-E Motronic Control Unit (16V GLI) (Grid 8-11)

WIRING DIAGRAMS
Article Text (p. 6)
 1992 Volkswagen Jetta
 For Volkswagen Technical Site
 Copyright © 1998 Mitchell Repair Information Company, LLC
 Tuesday, December 07, 1999 11:31PM

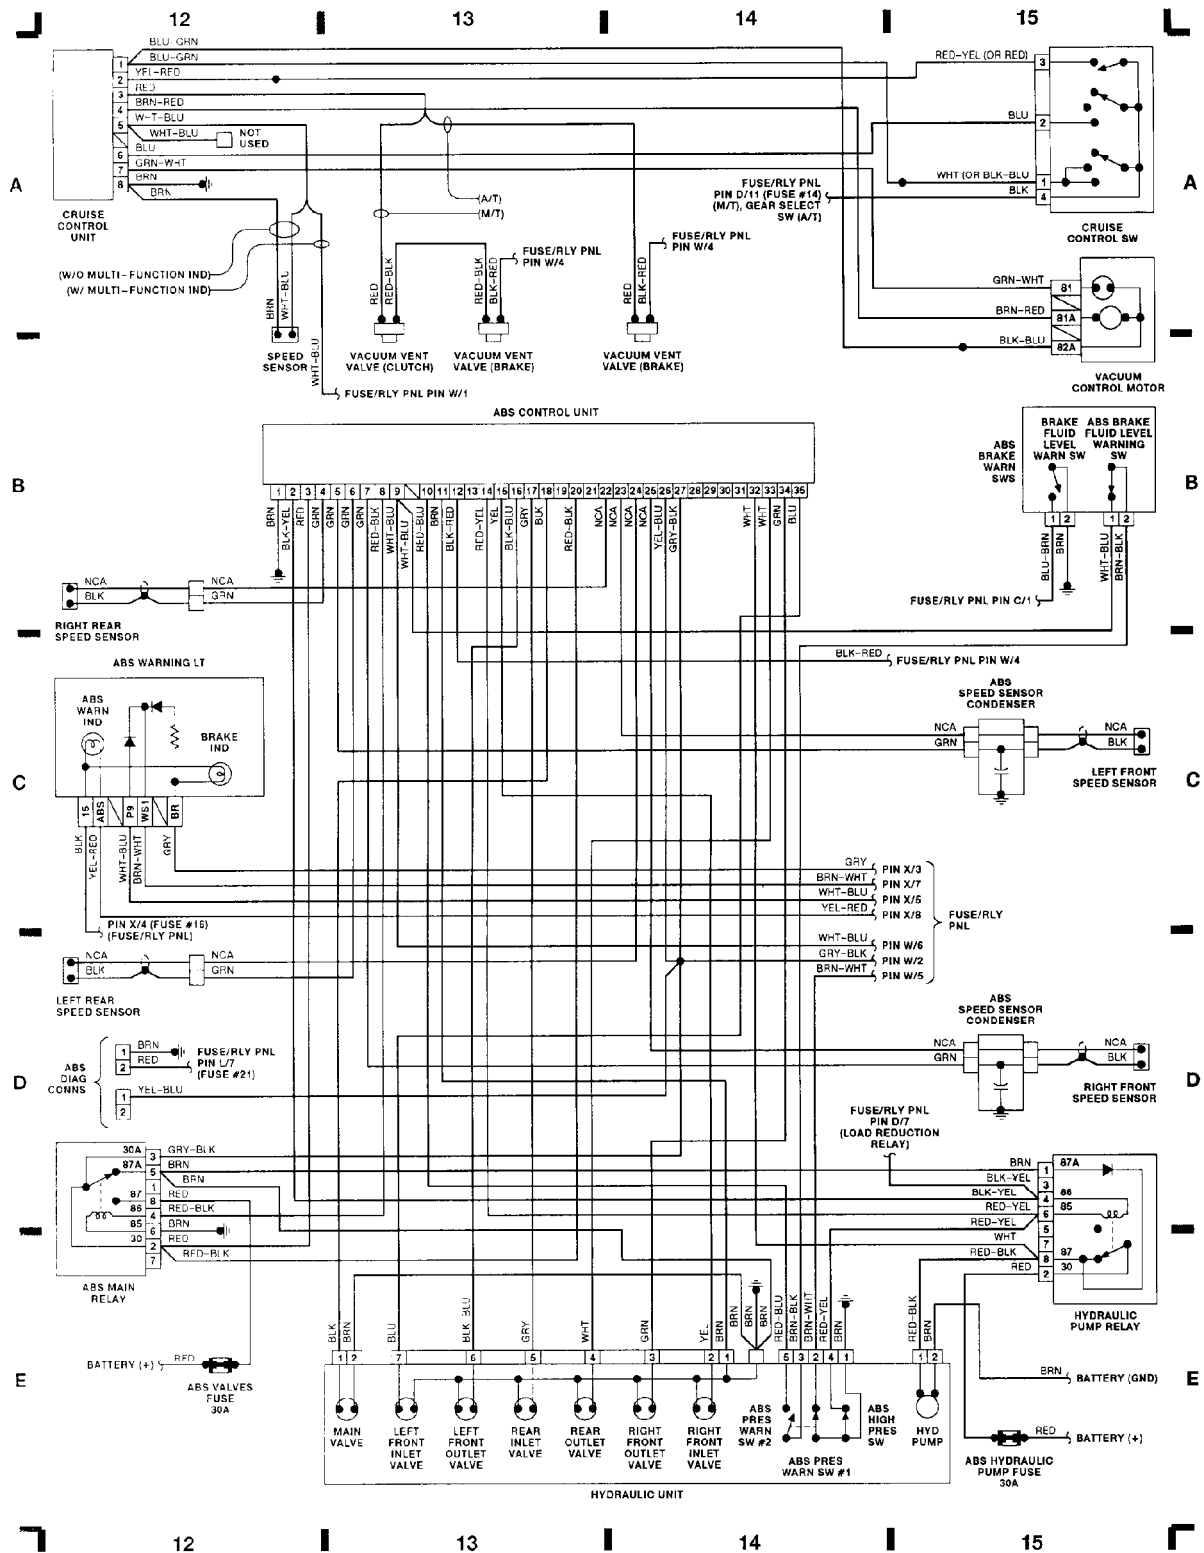


93A03819
 Fig. 4: ABS Control, Hydraulic, Cruise Control Units (Grid 12-15)

WIRING DIAGRAMS

Article Text (p. 7)


1992 Volkswagen Jetta

For Volkswagen Technical Site
Copyright © 1998 Mitchell Repair Information Company, LLC
Tuesday, December 07, 1999 11:31PM

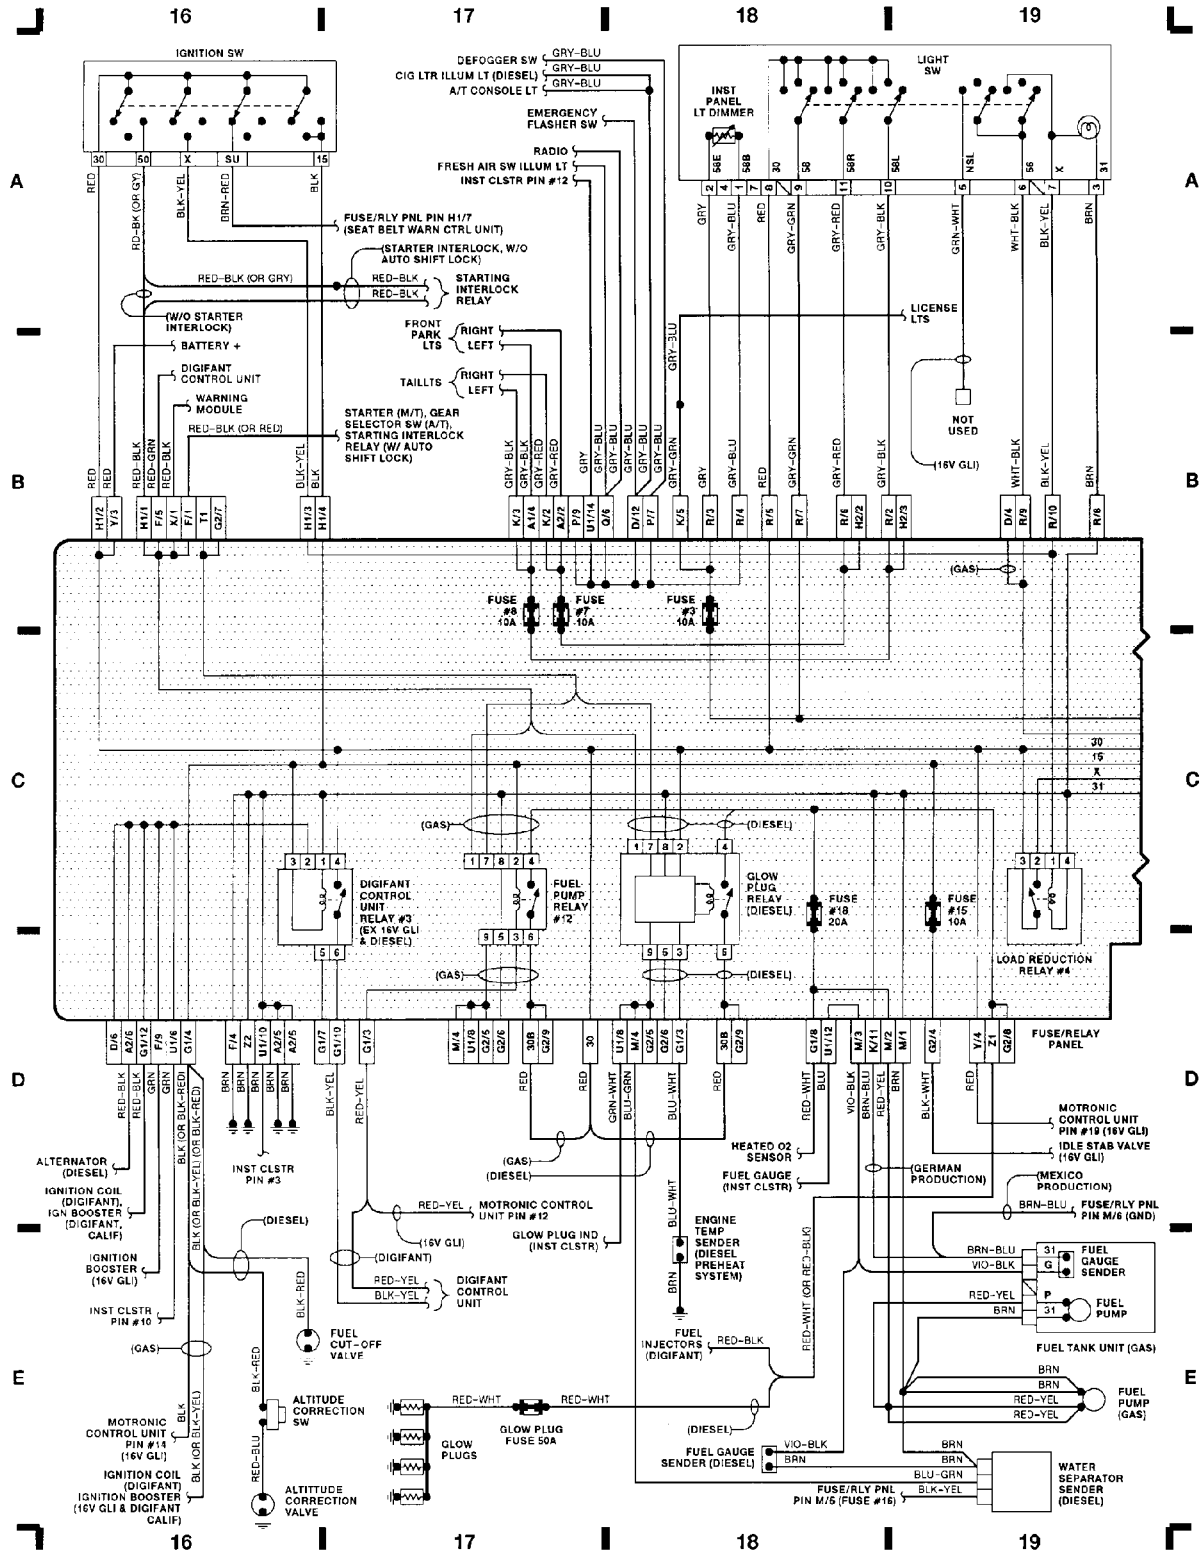

93C03820
Fig. 5: Ignition Sw, Light Sw, Fuse Relay Panel (Grid 16-19)


WIRING DIAGRAMS
Article Text (p. 8)
 1992 Volkswagen Jetta
 For Volkswagen Technical Site
 Copyright © 1998 Mitchell Repair Information Company, LLC
 Tuesday, December 07, 1999 11:31PM

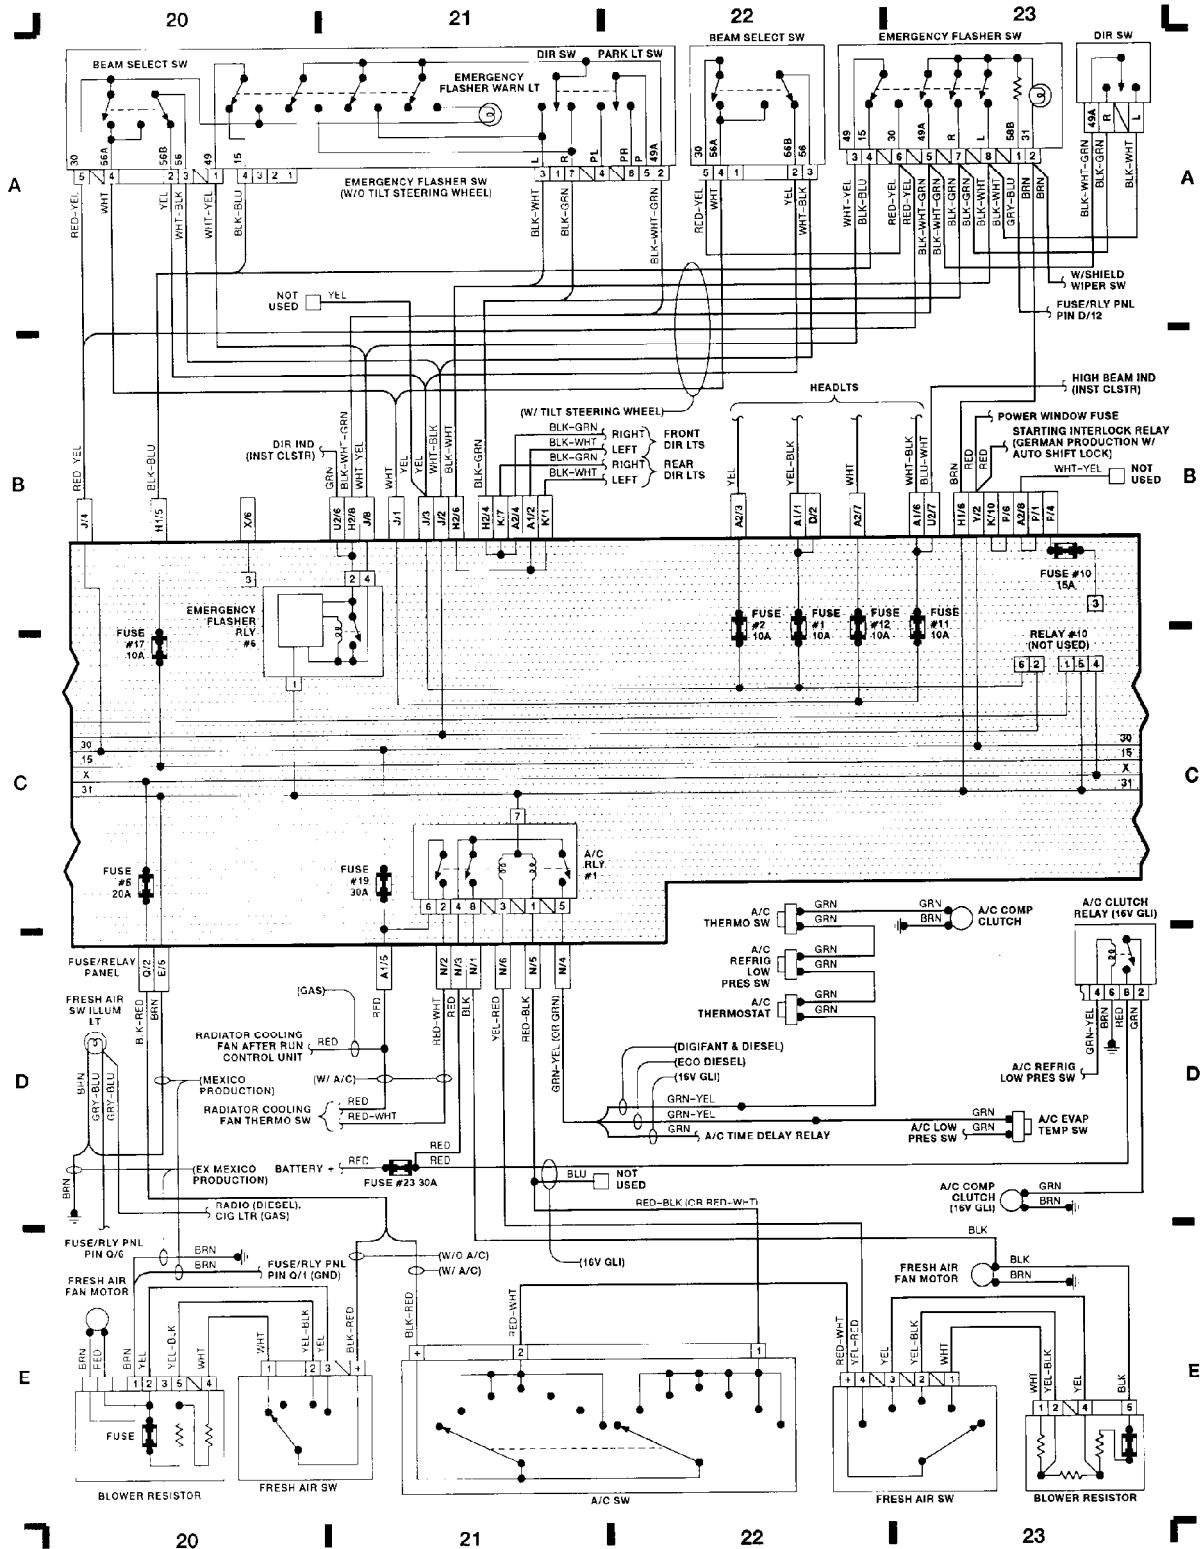

93E03821

Fig. 6: Emergency Flasher Sw, Fuse Relay Panel (Grid 20-23)


WIRING DIAGRAMS
Article Text (p. 9)
 1992 Volkswagen Jetta
 For Volkswagen Technical Site
 Copyright © 1998 Mitchell Repair Information Company, LLC
 Tuesday, December 07, 1999 11:31PM

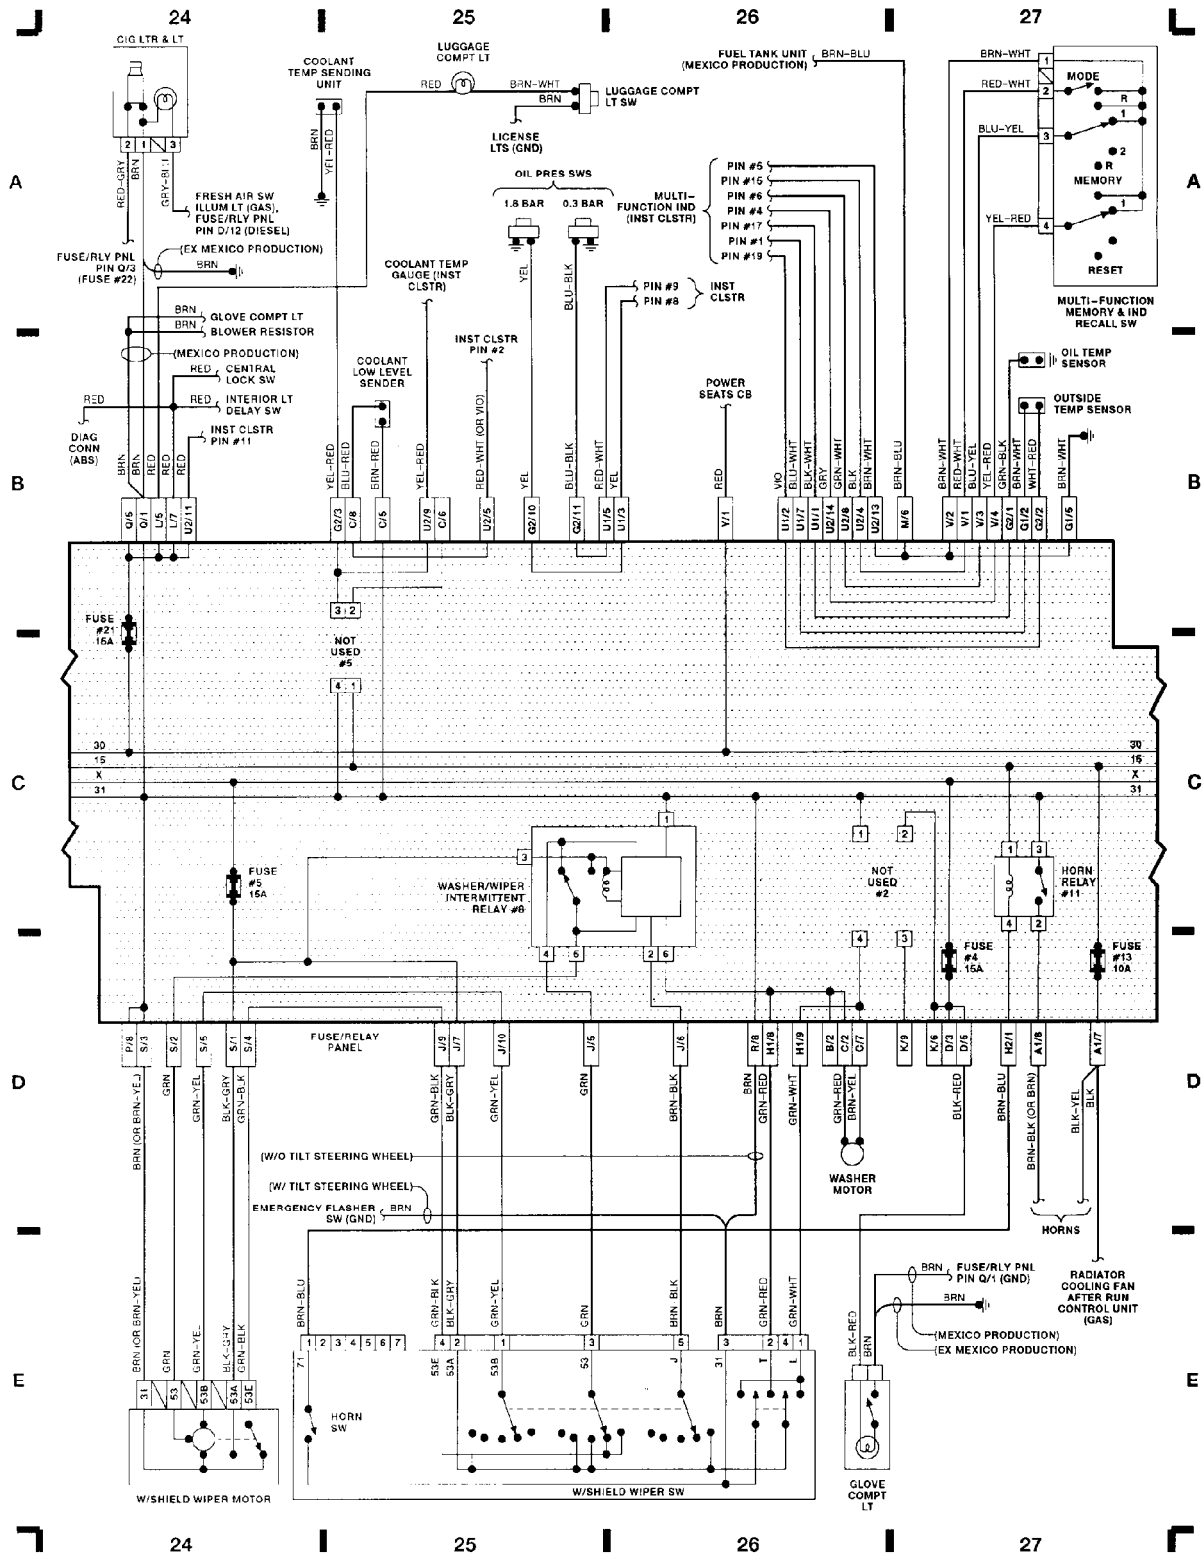

93G03822


Fig. 7: Multi-Function Memory Sw, Fuse Relay Panel (Grid 24-27)

WIRING DIAGRAMS
Article Text (p. 10)
 1992 Volkswagen Jetta
 For Volkswagen Technical Site
 Copyright © 1998 Mitchell Repair Information Company, LLC
 Tuesday, December 07, 1999 11:31PM

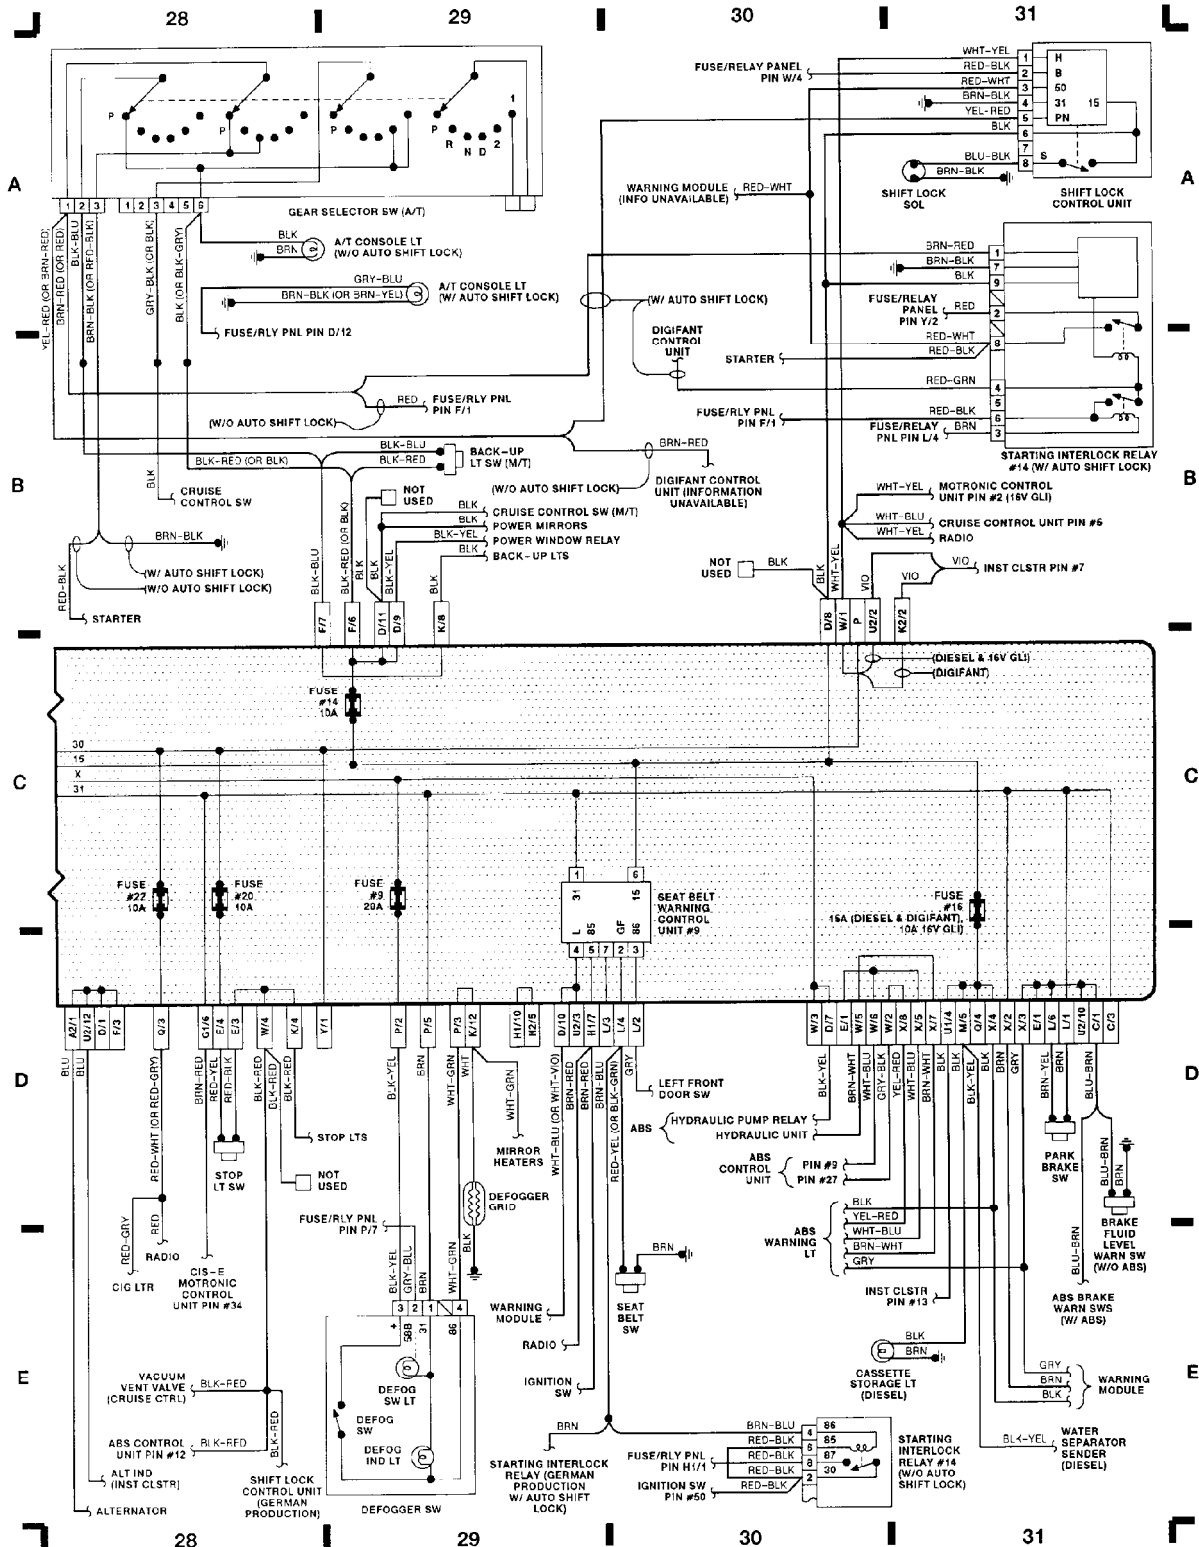


93103823
 Fig. 8: Starting Interlock Relay, Fuse Relay Panel (Grid 28-31)

WIRING DIAGRAMS
Article Text (p. 11)
 1992 Volkswagen Jetta
 For Volkswagen Technical Site
 Copyright © 1998 Mitchell Repair Information Company, LLC
 Tuesday, December 07, 1999 11:31PM

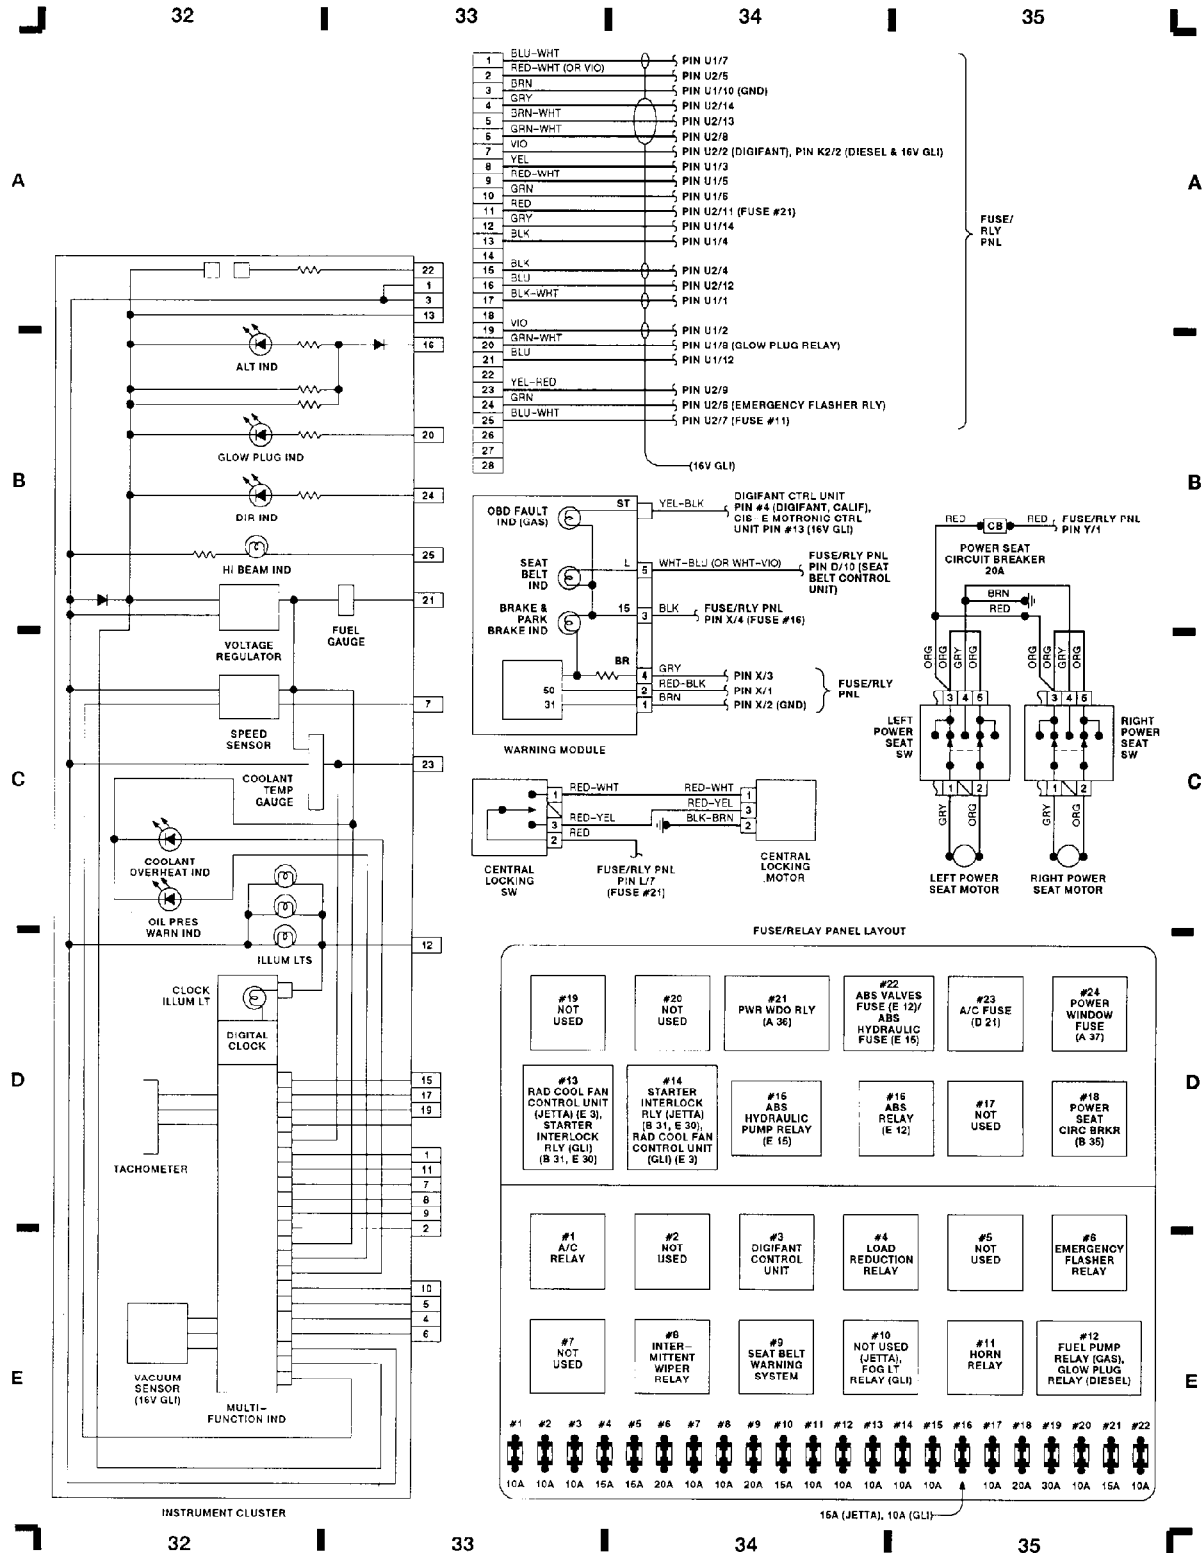

93A03824
 Fig. 9: Instrument Cluster, Fuse Relay Panel Layout (Grid 32-35)

WIRING DIAGRAMS
Article Text (p. 12)
 1992 Volkswagen Jetta
 For Volkswagen Technical Site
 Copyright © 1998 Mitchell Repair Information Company, LLC
 Tuesday, December 07, 1999 11:31PM

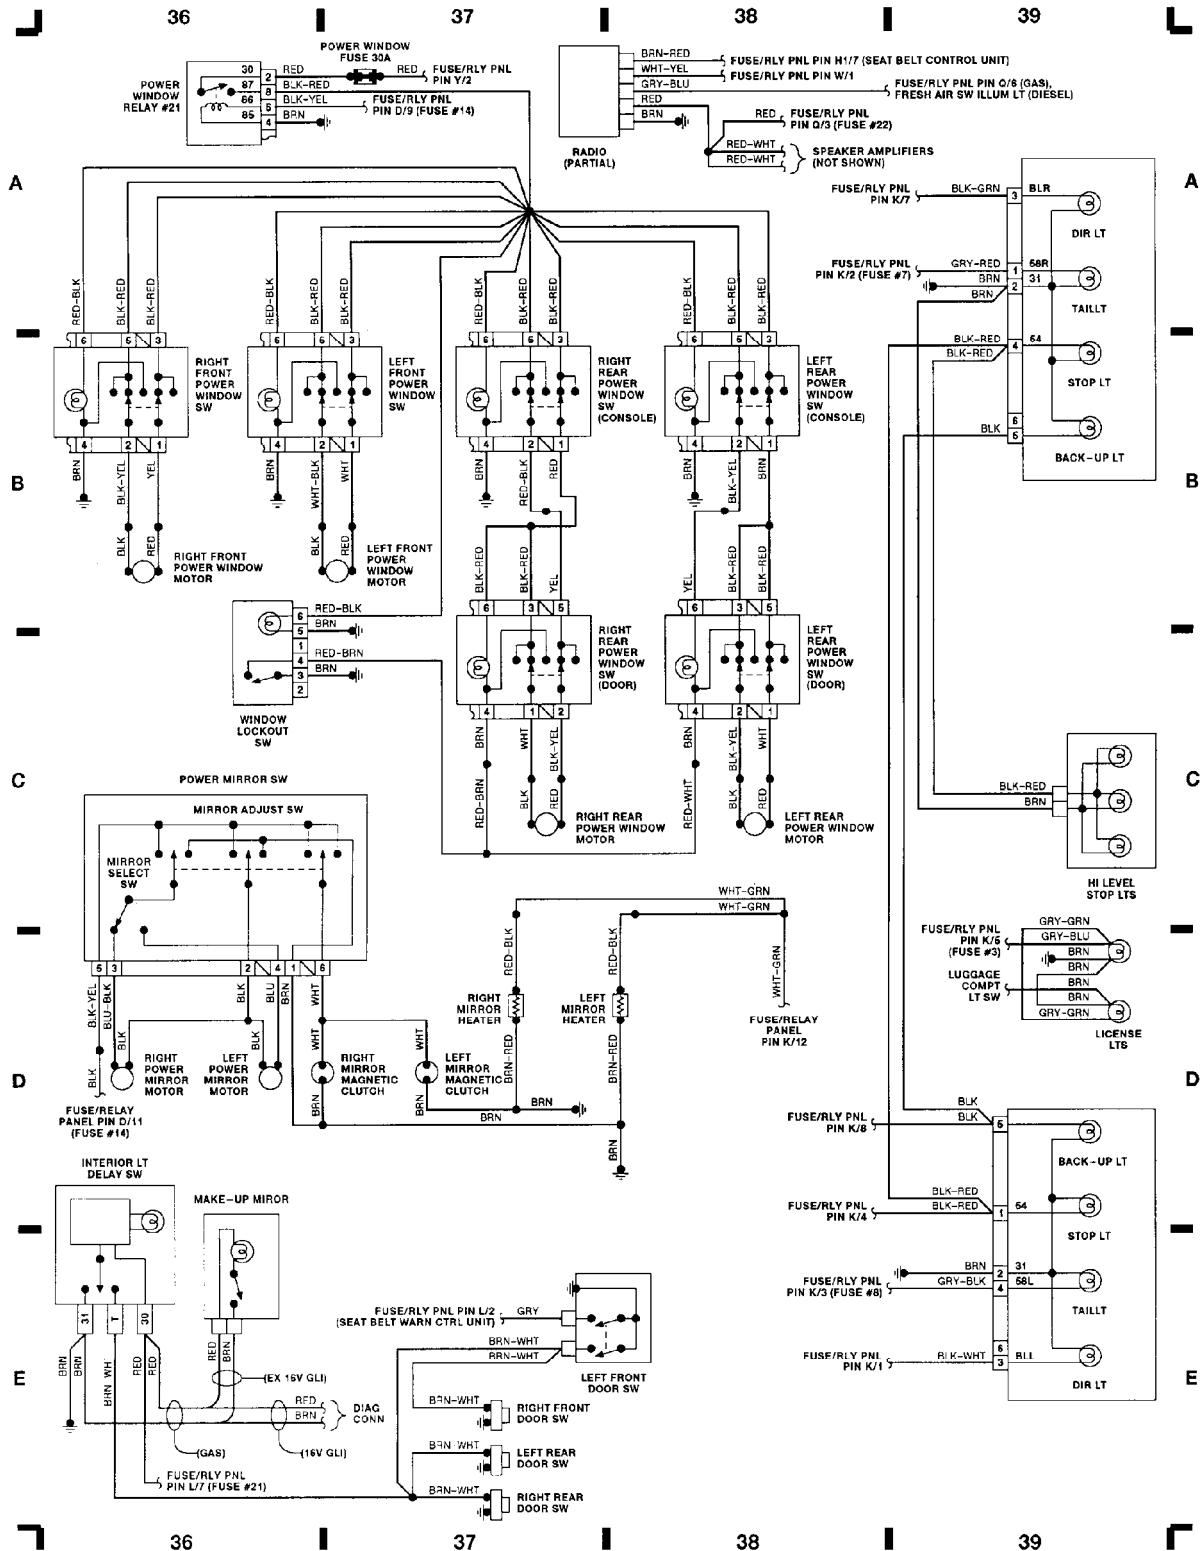

93D03825
 Fig. 10: Power Window/Mirror/Door Sw, Tail Lights (Grid 36-39)

END OF ARTICLE